


Yoke Grade 80 Clevis Sling Hook to EN1677

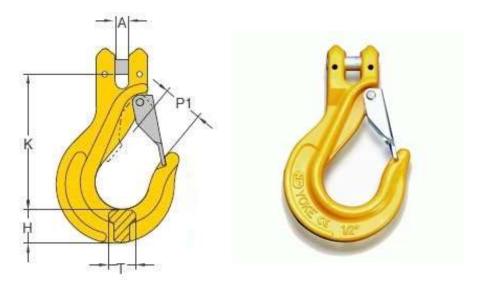

Item No.	Working Load Limit tonnes*	For Grade 80 Chain(mm) mm	Dimensions (mm)					N.W.
			A	Н	K	P1	Т	Kg
8-043/S-06	1.12	6	6	18	79	23	15	0.3
8-043/S-07	2.0	7, 8	9	22	98	27	18	0.6
8-043/S-10	3.15	10	11	29	121	34	23	1.2
8-043/S-13	5.3	13	14	37	147	44	30	2.3
8-043/S-16	8.0	16	18	42	166	48	39	3.7
8-043/S-20	12.5	18, 20	21	50	200	56	47	6.5

Instructions for use:

In general all grade 80 components should be inspected before use to ensure that:

- all markings are legible
- all items are free from nicks, gouges, cracks and corrosion
- items with the correct Working Load Limit have been selected with respect to the sling design i.e. the load to be lifted, the number of legs in the sling, the top angle etc.
- items may not be heat treated as this may affect their Working Load Limit
- never modify, repair or reshape an item by machining, welding, heating or bending as this may affect the Working Load Limit
- master links and the other items of the sling are all identifiable as being of the same steel grade
- items should be used for straight in line loading only, this in order to avoid bending
- items are not distorted or unduly worn

It is required that the products are regularly inspected. This is required because the products in use may be affected by wear, misuse, overloading, etc. with a consequence of deformation and alteration of the material structure.

Inspection by a competent person should take place at least every 12 months and even more frequently when the components are used in severe operating conditions.